



FHC1102-01 EPON OLT User Manual

Hardware Configuration Manual

1. Product Introduction
2. Specification and Features
3. Installation Preparation
4. Installation
5. Setup and Configuration
6. Update Software
7. Troubleshooting
8. Optional interface module
9. Appendix RJ-45 Connector

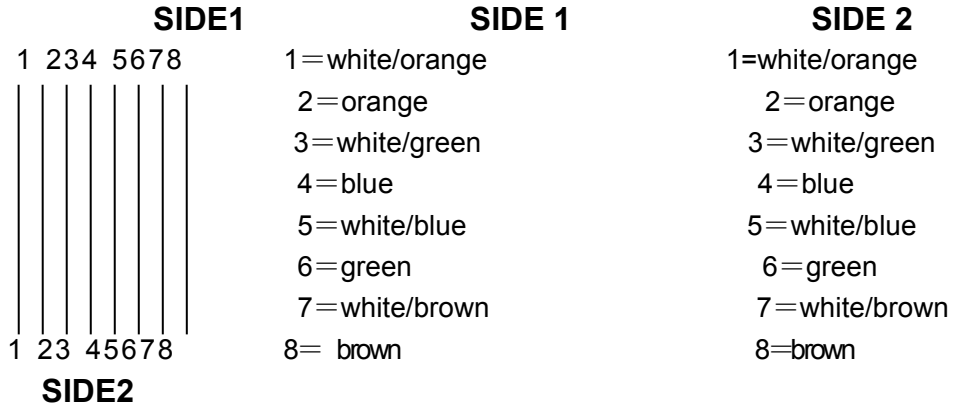

Picture 8-5 Make parallel reticle

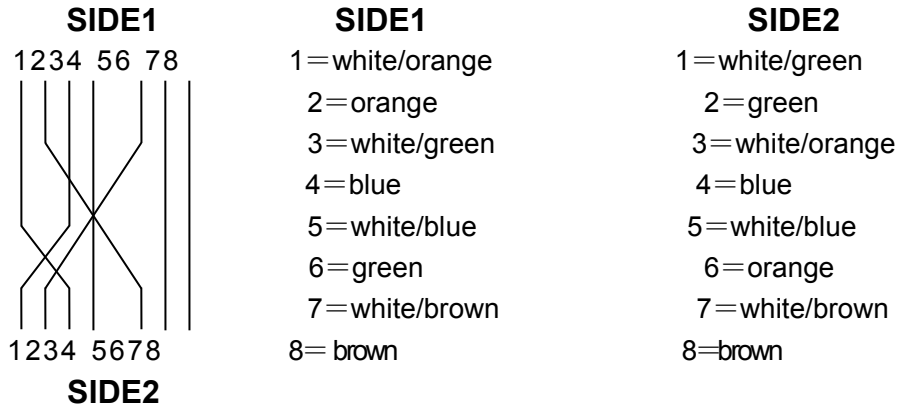

Picture 8-5 Make crossing reticle